

# ***PRELUDE***


— ENGINEERING LLC —

**PRELUDE-ENGINEERING.COM**


**88-91 Prelude Power Mirror Control Phone Mount**



Remove the 5 screws holding on the lower dash cover:

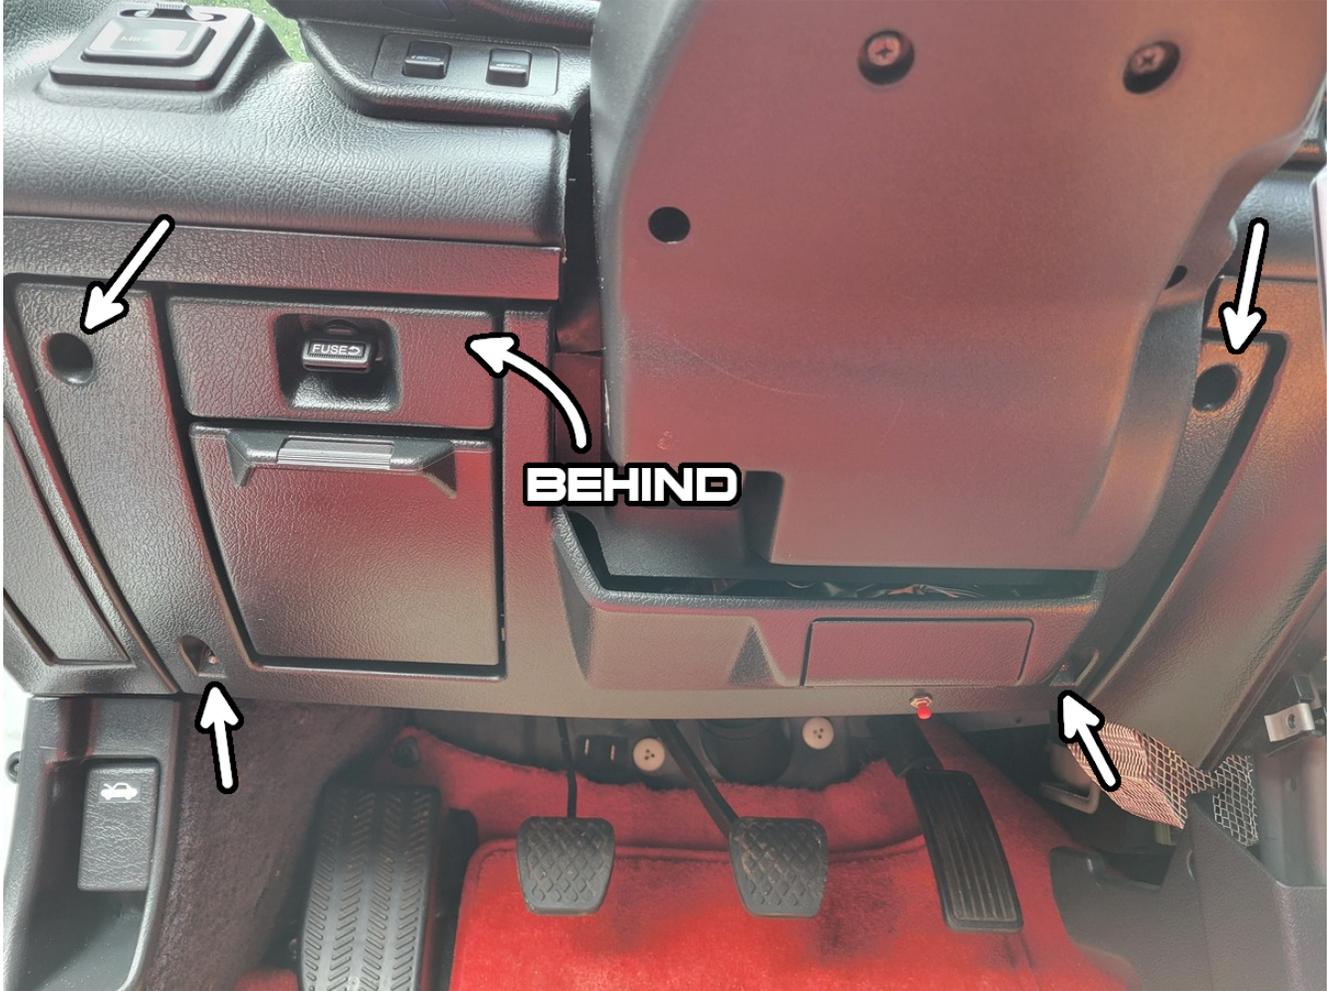

Disconnect the connectors and set the lower cover to the side:

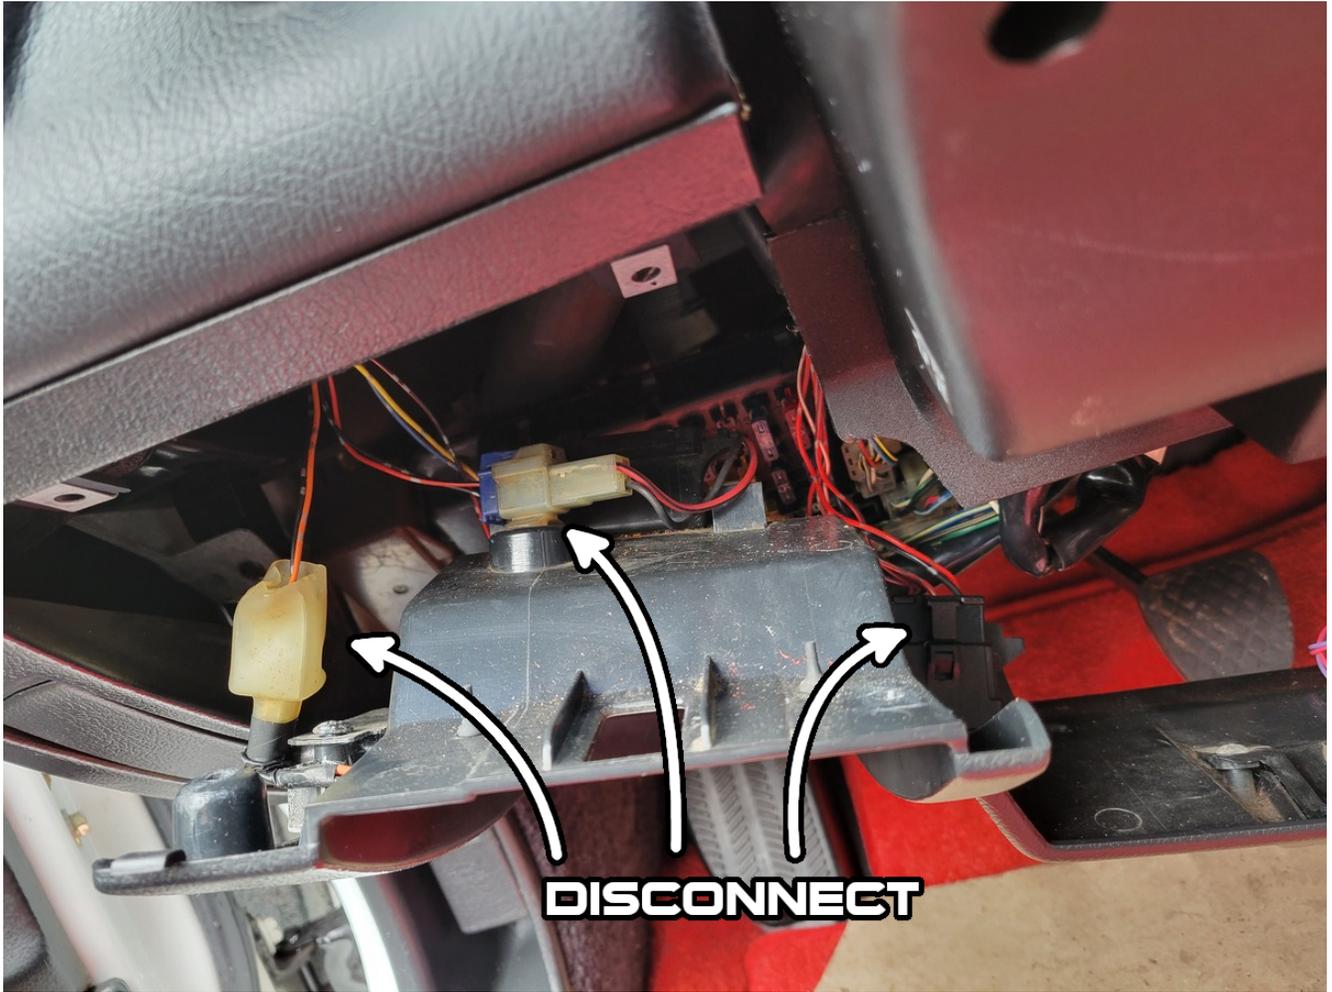

The power mirror control is held in place with a single screw. It's hard to see and you will have to look up from below to find it. There are several other screws in the area which aren't the correct one. The clearance is also tight so you should use a stubby Phillips screw driver:



Remove the screw:



With the screw removed push the control from the rear and it will pop out. Then you can disconnect the connector:



Place the mirror control in the new mount, it will only fit one way. The clearance is tight so you will need to give it a bit of a squeeze all around the perimeter to get it fully seated against the mount:



Now plug the connector back into the control and place everything back into the dash. Make sure the wire isn't trapped between the body and dash, or it will not fully seat.

The fit into the dash is also tighter than the stock part and will require precise placement and more of a push:



Once you have it fully seated use the longer screw provided with the new mount and screw it in from behind again.

After this reinstall the lower dash and the install is completed:



This new mount just provides you with a secure 1/4"-20 threaded hole which you can then build your desired setup off of. However, we will list the parts we used for this example in case you want something similar.

Search these terms on Amazon:

**1" Ball mount 1/4"-20 thread, aka. "B-size double socket arm"** – This is the ball that is screwed directly into our mount.

**Magnetic Phone Holder Base for RAM Mounts, 1" (25mm) Ball Mount with Short Aluminum Alloy B Size Double Socket Arm, Compatible with Magsafe** – This is the whole arm assembly. The length of the arm is 2.36"

