



88-91 Honda Prelude Traction Bar



Installation Instructions

(V1)

Here are the bolt length locations for the traction bar:




Here are the bolt length locations for the different block mounts:



Traction Bar, Torque Rod, and Skid Bar Install:

Put the traction bar in place and finger tighten the 4 lower 70mm bolts. Then install and tighten the 6 side 30mm bolts (use supplied large fender washers). Finally tighten the lower 70mm bolts.

This image shows the sequence:

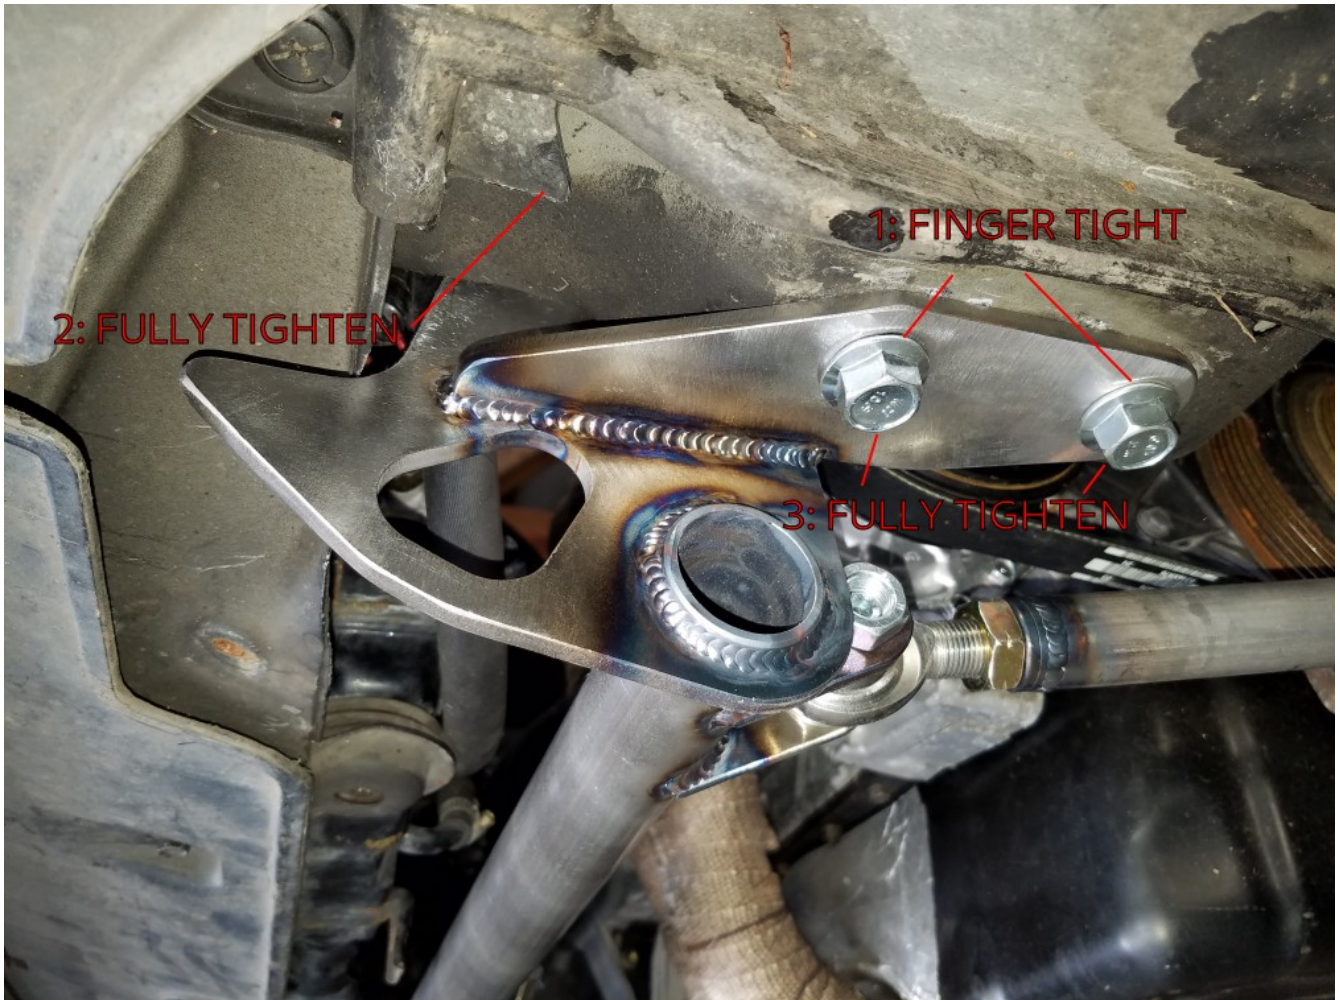


Put the control arm mounts into the radius rod rod ends and install both onto the control arms using the 40mm bolts:



After that attach the front rod ends to the traction bar using the 60mm bolts.

If you ordered the H/F series torque rod install the mount onto the block using 2 25mm bolts and 1 40mm bolt:

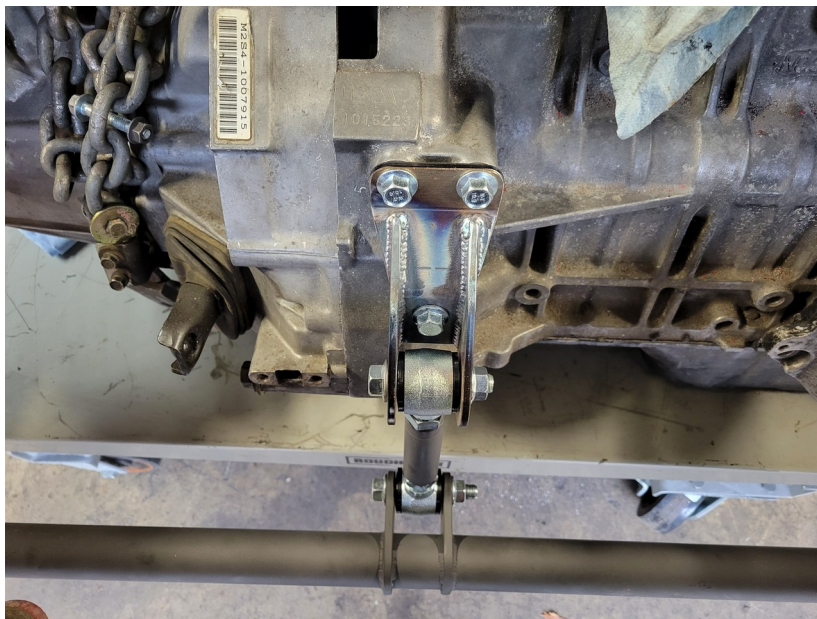

If you ordered the B series torque rod install the mount on the block. The 2 top bolts that go through the transmission bell housing are 70mm and the lower bolt that goes through the block is 80mm:



If you ordered the skid bar then it goes on by reusing the lower torque rod bolt as well as two additional 25mm bolts in the rear:

